



PZ-NOT1



Nose/Ear hair trimmer (battery operated)

Instruction manual

1 Becoming familiar with your appliance

Dear customer,

please read this user manual thoroughly, keep it for later reference, make it available to other users and follow the instructions contained herein. Keep the guarantee card, the receipt and, if possible, the original packaging!

In order not to damage the appliance, and to avoid improper use and any risk of injury, follow all the safety and usage instructions specified in this user manual. We do not assume any liability whatsoever for damages or accidents caused by non-compliance with the user manual.





2 Intended use

The nose ear hair trimmer is intended exclusively for trimming human nose and ear hair. It has been designed for private home use and must not be used for commercial purposes. Use the appliance exclusively for the intended purpose described in this user manual. The appliance is intended for indoor use only.

Foreseeable misuse:

Do not use the appliance to cut artificial hair or animal hair.

3 Symbol description

-  **Warning** Risk of injury or risk to your health
-  **Note** Important information
-  **Caution** Do not immerse the appliance in water or other liquids.
-  **Caution** Appliance not suitable for cleaning under running water.

4 Warning and safety instructions


Instructions for a safe operation

- This appliance may be used by children over the age of 8 as well as by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided that they have been given supervision or instruction concerning use of the appliance and that they have understood the dangers resulting therefrom.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be performed by children unless they are supervised.
- Keep the device and accessories out of children's reach.

DANGER for children

- For safety reasons, keep any packaging parts (plastic bags, cardboard, Styrofoam etc.) out of reach of children and animals. Children must not play with plastic bags; they pose a risk of suffocation!

Batteries

- Batteries are dangerous and can cause death if swallowed. For this reason, store batteries out of the reach of small children. If a battery has been swallowed, a doctor must be consulted immediately.
 - When inserting the battery, observe the correct polarity.
 - If the appliance will not be used for an extended period of time, remove the battery. The battery could leak and damage the appliance.
 - Do not expose the batteries to extreme conditions, do not place them on heaters and do not expose them to direct sunlight. Otherwise there is an increased danger of the batteries leaking.
 - Batteries must not be charged or reactivated in any other way, must not be disassembled, disposed of in a fire, or short-circuited.
 - When battery acid has leaked, avoid contact with skin, eyes and mucous membranes. In the event of contact with the acid, rinse the affected areas liberally with clear water and consult a doctor immediately.
-  **WARNING! Risk of injury**
- Do not insert the nose/ear hair trimmer attachment too far into your nostril or ear.
 - Do not use the appliance on injured skin (e.g. open wounds or swellings, rash, sunburn).

- Before using the appliance, ensure the attachments are in a proper condition. Do not use defective attachments.
- Do not operate the appliance if the appliance shows visible signs of damage or if the appliance has been dropped.
- Switch the appliance off before attaching or changing the attachments and before cleaning.
- Keep the appliance away from your eyes.
- To avoid any risk, do not make any changes to the appliance or accessories. Repairs must only be carried out by a specialized company.

WARNING! Risk of material damage


- Protect the appliance from moisture, dripping water or splash water.
- Do not use any harsh or abrasive cleaning agents.

5 Operation

Inserting the battery

Use a 1.5 V LR6 (AA) battery as energy supply.

1. Move the on/off switch downwards, to switch off the appliance.
2. Turn the appliance so that the battery compartment cover is at the top.
3. Slightly turn the battery compartment cover anti-clockwise and pull it off.
4. If necessary, remove the old battery. Insert a new battery. The negative terminal (-) must be directed towards the battery compartment cover.
5. Place the battery compartment cover upon the appliance again and move it slowly in clockwise direction until it clicks into place and is secure.

 **Note:** The line on the battery compartment cover must match the points on the appliance!



Nose/ear hair trimmer attachment

The nose/ear hair trimmer attachment is intended for cutting nose and ear hair.

1. Take off the protective cap.
2. Check that the attachment is in place.
3. Move the on/off switch upwards to switch on the appliance.
4. Slowly insert the metal tip into one of your nostrils or ears.
5. Move the appliance in circles to cut the hair.
6. Move the on/off switch downwards to switch off the appliance and clean it.

6 Cleaning and storage

CAUTION! Material Damage

- Before each cleaning, switch off the appliance.
- When cleaning the appliance, ensure that the battery compartment cover at the bottom of the appliance is tightly closed.
-  **Caution!** Do not immerse the appliance in water or other liquids.
- Do not use abrasive cleaning agents or aggressive liquids.
-  **Note:** Clean the attachment after each use.


- Wipe the appliance housing with a slightly damp cloth.
- Turn the appliance so that the cutting attachment is facing upwards. Turn the cutting attachment slightly counter-clockwise and pull it off. The attachment with shear blade can also be cleaned under running water after it has been removed from the appliance. Allow it to dry completely before putting it back on.

7 Technical Data

Model	PZ-NOT1
Battery	1x Alkaline 1,5 V LR6 (AA)

Subject to technical modifications.

This appliance is in conformance with the CE directives.

 With the CE mark, Dual GmbH confirms compliance with the European directives applicable to this product.

This appliance meets the fundamental requirements and other relevant provisions set forth in EMC Directive 2014/30/EU and RoHS Directive 2011/65/EU.


If you would like to receive the full EC Declaration of Conformity, please email us at: support@dual.de

Importer: Dual GmbH
Hauptstraße 1 · D-86925 Fuchstal · Germany

8 Scope of delivery


Nose/ear hair trimmer, protection cap, cleaning brush, instruction manual


9 Disposal

 **In the interests of environmental protection, the appliance must not be discarded with normal household waste.**

This symbol indicates that the appliance is subject to Directive 2012/19/EU of the European Parliament and of the Council, pursuant to which it is prohibited to dispose of it with normal household waste!

By law, each consumer is obliged to dispose of old appliances separately from their household waste, taking them to a collection point for electrical and electronic appliances.


 The battery must be disposed of properly. Contact battery distributors or local waste disposal points for this.

 With the exception of wood-based materials, packaging and packaging accessories are recyclable, which is why they should always be recycled.

Our recommendations:

Paper, cardboard and corrugated cardboard and/or plastic packaging should be disposed of in the respective recycling containers.

Please help protect the environment by disposing of all packaging in an eco-friendly way. Your dealer or local waste management facility can provide you with information about the current possibilities for disposal.

 **Danger to life!**
Keep the packaging and its parts out of reach of children.

10 Warranty and Service

Dear customer:

Our products are subject to strict quality controls and covered by the statutory warranty of 24 months starting on the day of purchase. If your product does not function flawlessly, contact our customer service by phone or by email.

E-Mail: support@dual.de
Service-Hotline: Tel.: +49 8191 915 777 34

03/2024