



PZ-DR1



Lady shaver (battery operated) Instruction manual

1 Becoming familiar with your appliance

Dear customer, please read this user manual thoroughly, keep it for later reference, make it available to other users and follow the instructions contained herein. Keep the guarantee card, the receipt and, if possible, the original packaging!

In order not to damage the appliance, and to avoid improper use and any risk of injury, follow all the safety and usage instructions specified in this user manual. We do not assume any liability whatsoever for damages or accidents caused by non-compliance with the user manual.

2 Intended use

The lady shaver is intended exclusively for shaving fine human hair on arms, legs, in armpits and the bikini area. It has been designed for private home use and must not be used for commercial purposes. Use the appliance exclusively for the intended purpose described in this user manual. The appliance is intended for indoor use only.

Foreseeable misuse:

Do not use the appliance to cut artificial hair or animal hair. Do not use on scalp hair and eyebrows.

3 Symbol description

Warning Risk of injury or risk to your health

Note Important information

This appliance is suitable for use in bathtubs, showers, sinks or other vessels that contain water.

4 Warning and safety instructions

Instructions for a safe operation

- This appliance may be used by children over the age of 8 as well as by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided that they have been given supervision or instruction concerning use of the appliance and that they have understood the dangers resulting therefrom.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be performed by children unless they are supervised.
- Keep the device and accessories out of children's reach.

DANGER for children

- For safety reasons, keep any packaging parts (plastic bags, cardboard, Styrofoam etc.) out of reach of children and animals. Children must not play with plastic bags; they pose a risk of suffocation!

Batteries

- Batteries are dangerous and can cause death if swallowed. For this reason, store batteries out of the reach of small children. If a battery has been swallowed, a doctor must be consulted immediately.
- When inserting the battery, observe the correct polarity (+ and -).
- If the appliance will not be used for an extended period of time, remove the battery. The battery could leak and damage the appliance.
- Do not expose the batteries to extreme conditions, do not place them on heaters and do not expose them to direct sunlight. Otherwise there is an increased danger of the batteries leaking.
- Batteries must not be charged or reactivated in any other way, must not be disassembled, disposed of in a fire, or short-circuited.
- When battery acid has leaked, avoid contact with skin, eyes and mucous membranes. In the event of contact with the acid, rinse the affected areas liberally with clear water and consult a doctor immediately.

WARNING! Risk of injury

- Do not use the appliance on injured skin (e.g. open wounds or swellings, rash, sunburn).
- Consult a doctor prior to the first use if you suffer from extremely sensitive skin, varicose, hemophilia or another skin disease.
- Danger of skin irritation: Do not use alcohol containing lotions or perfumes immediately after shaving.
- Keep the appliance away from your scalp hair and eyes/eyebrows/eyelashes.
- Before use, check whether the shaving head has any damage. Do not use the appliance with a defective shaving head.
- Do not operate the appliance if the appliance shows visible signs of damage or if the appliance has been dropped.
- Switch the appliance off before attaching or changing the shaving head and before cleaning.
- To avoid any risk, do not make any changes to the appliance or accessories. Repairs must only be carried out by a specialized company.

WARNING! Risk of material damage

- Do not expose the appliance to temperatures below 0 °C or exceeding +40 °C.
- Use original accessories only.
- Do not use any harsh or abrasive cleaning agents.

5 Before first use

DANGER for children! Danger to life when swallowing a battery! Keep the battery out of children's reach.

Inserting the battery

Use two 1.5 V LR3 (AAA) batteries as energy supply.

- Move the on/off switch (5) downwards, to switch off the appliance.
- Pull the battery compartment cover (6) off the appliance.
- Insert 2 alkaline batteries, type 1.5 V LR3 (AAA).
- Observe the correct polarity (see marking in battery compartment).
- Put the battery compartment cover back on until you hear it click into place.

Note:

- Type and charging state of the inserted batteries should always be identical!

6 Product overview / scope of delivery

Note: Check that all accessories are included and undamaged.



7 Operation

WARNING!

- Do not use if the foil or trimmer parts of the attachment are damaged.

Notes:

- The Wet & Dry function allows you to shave on wet and dry skin, as well as in the shower.
- Shave against direction of hair growth in order to ideally grip fine hair.

Switching on

- Remove the protective cap (1).
- Press the travel lock button slightly inwards and push the on / off switch (5) upwards.

Long hair trimmer (2)

- Wash the appropriate body area with warm water and soap.
- Pre-shorten longer hairs with the integrated long hair trimmers (2) a+b.
- Straight long hair trimmer (2) a: Shaving larger, flat areas of skin (arms, legs).
- Curved long hair trimmer (2) b: Shaving in the armpit and bikini area.

Foil shave

DANGER of skin irritation and foil breakage! Avoid excessive pressure on the skin.

- Keep the skin of the appropriate body area stretched.
- Put the lady shaver to the skin at a 90 ° angle. Ensure that the switch (5) is facing you.
- Move the lady shaver with circular movements across the skin.

Using the trimmer attachment (1) for hair removal under the armpit and in the bikini area

DANGER! Risk of skin irritation and injuries! Never shave against the direction of hair growth.

- Wash the appropriate body area with warm water and soap.
- Longer hairs must be shortened with the trimmer attachment (1) first and subsequently trimmed with the long hair trimmer (2) a or b.
- Try which long hair trimmer works the best for you.
- When using the foil shaver, always start at the hairline of the bikini area and shave from the outside to the inside.
- After shaving, apply baby powder or a mild alcohol-free lotion on the shaved area.

8 Cleaning, care and storage

Cleaning / Care of the shaving head

Notes:

- Thoroughly clean the shaving head (3) after each use in order to maintain optimum function.
- The shaving head can be rinsed under running water.

- Remove the shaving head (3) from the appliance by pressing shaving head release buttons (4).
- Use the cleaning brush to remove the hair from shaving head and housing.
- Rinse the shaving head under running water.
- Allow the shaving head to dry.
- Reattach the shaving head firmly to the lady shaver until it stops with an audible click. **Important:** The straight long hair trimmer (2) a points to the front.
- Reattach the protective cap (1).

Cleaning the housing

CAUTION!

Do not use any harsh or abrasive cleaning agents. When cleaning the appliance, ensure that the battery compartment cover (6) at the bottom of the appliance is tightly closed.

- Wipe the appliance housing with a slightly damp cloth.

Storage

- Store the appliance in a safe, dry place where it is protected from access by persons not familiar with the safe handling of the appliance.

9 Spare parts

Cutting elements are subject to natural wear and excluded from the warranty. In order to achieve optimum shaving results, it is indispensable to replace these parts in time – at least every 12 months.

Contact our customer service by phone or email. Information about this can be found in the Warranty and Service section at the end of this guide.

10 Technical Data

Model	PZ-DR1
Battery	2x Alkaline 1,5 V LR3 (AAA)
Ambient temperature	0 °C bis +40 °C

Subject to technical modifications.

CE This appliance is in conformance with the CE directives. With the CE mark, Dual GmbH confirms compliance with the European directives applicable to this product.

This appliance meets the fundamental requirements and other relevant provisions set forth in EMC Directive 2014/30/EU and RoHS Directive 2011/65/EU.

If you would like to receive the full EC Declaration of Conformity, please email us at: support@dual.de

Importer: Dual GmbH
Hauptstraße 1 · D-86925 Fuchstal · Germany

11 Disposal

In the interests of environmental protection, the appliance must not be discarded with normal household waste.

This symbol indicates that the appliance is subject to Directive 2012/19/EU of the European Parliament and of the Council, pursuant to which it is prohibited to dispose of it with normal household waste!

By law, each consumer is obliged to dispose of old appliances separately from their household waste, taking them to a collection point for electrical and electronic appliances.

The battery must be disposed of properly. Contact battery distributors or local waste disposal points for this.

With the exception of wood-based materials, packaging and packaging accessories are recyclable, which is why they should always be recycled.

Our recommendations:

Paper, cardboard and corrugated cardboard and/or plastic packaging should be disposed of in the respective recycling containers.

Please help protect the environment by disposing of all packaging in an eco-friendly way. Your dealer or local waste management facility can provide you with information about the current possibilities for disposal.

Danger to life! Keep the packaging and its parts out of reach of children.

12 Warranty and Service

Dear customer:

Our products are subject to strict quality controls and covered by the statutory warranty of 24 months starting on the day of purchase. If your product does not function flawlessly, contact our customer service by phone or by email.

E-Mail: support@dual.de
Service-Hotline: Tel.: +49 8191 915 777 34

03/2024